

# YAMAHA MT09 / SP '21-

## M O U N T I N G I N S T R U C T I O N S

REF 21133

DOWNFORCE NAKED FRONTAL SPOILER



1 Person




15 min



EASY



ALLEN  
Nº 3  
Nº 4


ID	PIEZA/PART	DESCRIPCIÓN	DESCRIPTION	QTY	REF
1		Alerón frontal naked	Naked frontal spoiler	1	21133J/CM3
2		Soporte Aluminio ( Negro)	Aluminum support ( Black)	1	SOP1P5----21133
3		Tope de goma Ø3,7-3,8 x 3,2mm	Ø3,7-3,8 x 3,2mm Bumper foot	3	TOPE--POF-40022
4		Tornillo Allen M5x16 Ø11 ISO 7380	M5x16 Ø11 ISO 7380 Allen screw	2	TORNI-I7380-493
5		Arandela de goma Ø4,5 x Ø11 x 2mm	Ø4,5 x Ø11 x 2mm rubber washer	2	ARAND-EPDM--722
6		Arandela de nylon M5x1	M5x1 Nylon washer	2	ARNV00000000245
7		Tornillo Allen M5x12 Ø11 ISO 7380	M5x12 Ø11 ISO 7380 Allen screw	2	TORNI-AI----520
8		Tapón tornillo M5 ISO 7380	M5 ISO 7380 screw cap	2	TAPON-----85

# YAMAHA MT09 / SP '21-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG


**1**

**DISASSEMBLY  
DESMONTAJE**

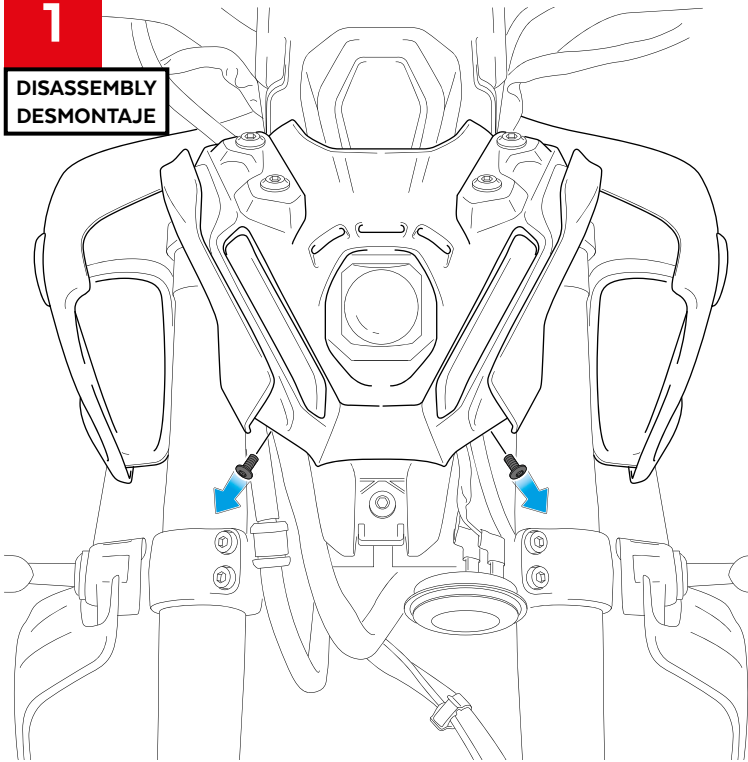


**2**

**ASSEMBLY  
MONTAJE**

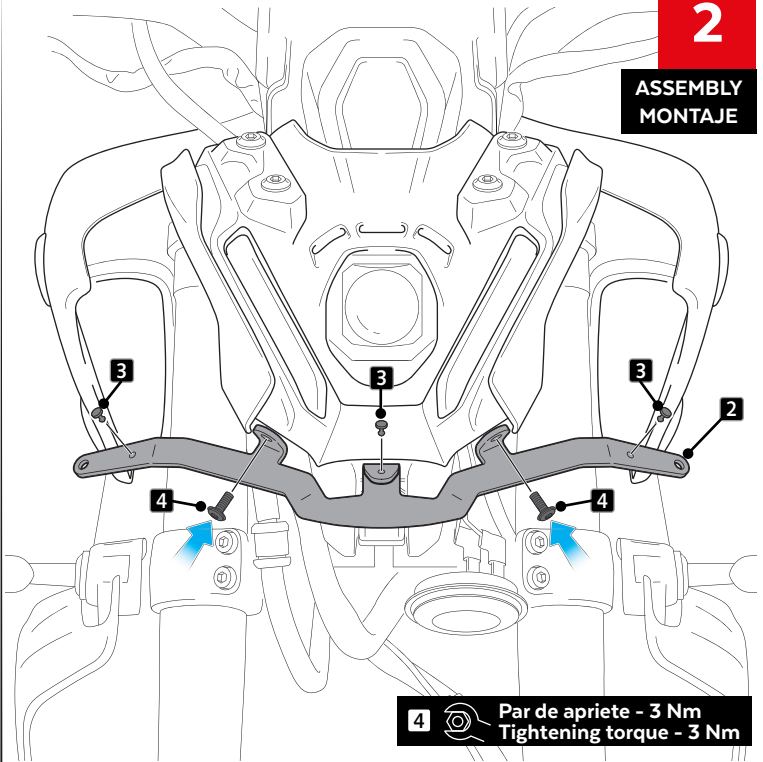

**3**

**ASSEMBLY  
MONTAJE**

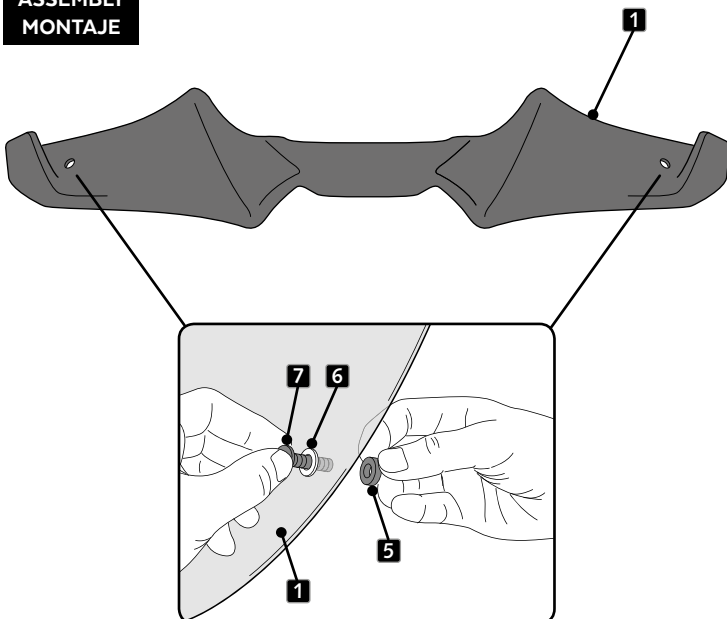

**4**

**ASSEMBLY  
MONTAJE**

