

# BMW R1300GS / R1300GS ADVENTURE '23-

## M O U N T I N G I N S T R U C T I O N S

REF 22321

**TOURING SCREEN WITHOUT RADAR/ACC**

**COMPATIBLE WITH ALL VERSIONS AND PACKS**

  
1 Person

  
15 min

  
EASY




ID.	PIEZA/PART	DESCRIPCIÓN	DESCRIPTION	QTY.	REF.:
1		Cúpula Touring	Touring screen	1	22321W/H/FM3
2		Arandela de nylon Ø8xØ13x1mm	Ø8xØ13x1mm nylon washer	4	ARAND-N-----265
3		Tapón para rosca M5	M5 thread cap	4	TAPON-----84

# BMW R1300GS / R1300GS ADVENTURE '23-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG


1

DISASSEMBLY  
DESMONTAJE

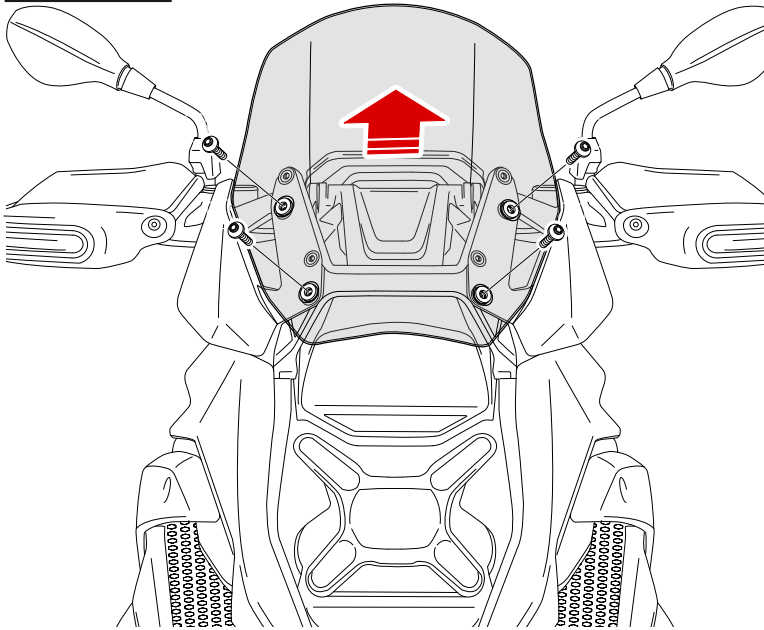


2

ASSEMBLY  
MONTAJE

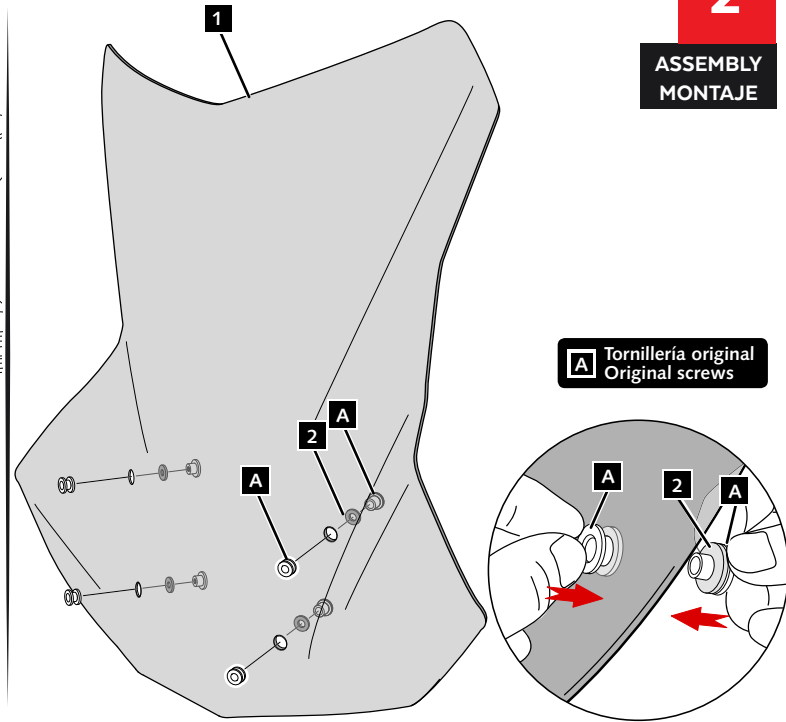

3

ASSEMBLY  
MONTAJE

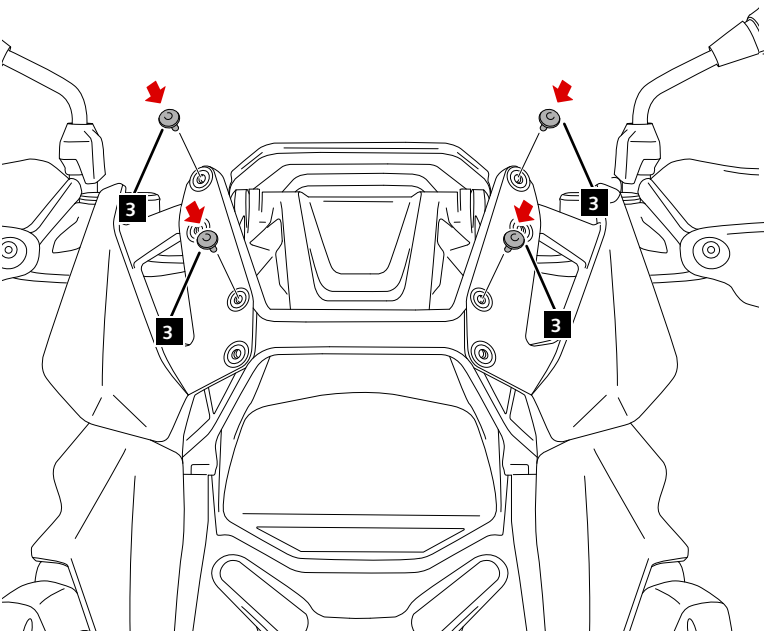

4

ASSEMBLY  
MONTAJE

