

BMW S1000R / M1000R '25-

M O U N T I N G I N S T R U C T I O N S

REF 22783

WINDSHIELD NG SPORT



1 Person



20 min



EASY



TORX
T40

ALLEN
Nº 3
Nº 6


ID	PIEZA/PART	DESCRIPCIÓN	DESCRIPTION	QTY	REF
1		Cúpula Sport	Sport screen	1	22783-H/F/W/N/J/R/AM3
2		Soporte izquierdo (L)	Left support (L)	1	SOPOR2P2-L22783
3		Soporte derecho (R)	Right support (R)	1	SOPOR2P2-R22783
4		Casquillo Ø8,5xØ13x15mm	Ø8,5xØ13x15mm Arrowhead	2	CASQUI-M----614
5		Tornillo Allen M8x50 DIN912	M8x50 DIN912 Allen screw	2	TORNI-D912--532
6		Tope de goma Ø11xØ5,5x 7mm	Ø11xØ5,5x 7mm Bumper foot	4	TOPEGOMA--22384
7		Silentblock Ø12xØ6x9	Ø12xØ6x9 Silentblock	4	AROPASACABLES-1
8		Casquillo con valona Ø12xØ6,8x7,3	Ø12xØ6,8x7,3 Bush with flange	4	CASQUI-1A---750
9		Tornillo Allen M5x16 Ø11 ISO 7380	M5x16 Ø11 ISO 7380 Allen screw	4	TORNI-I7380-493
10		Tapón tornillo M5 ISO 7380	M5 ISO 7380 Screw cap	4	TAPON-----85

BMW S1000R / M1000R '25-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG


1

PRE-ASSEMBLY
PRE-MONTAJE

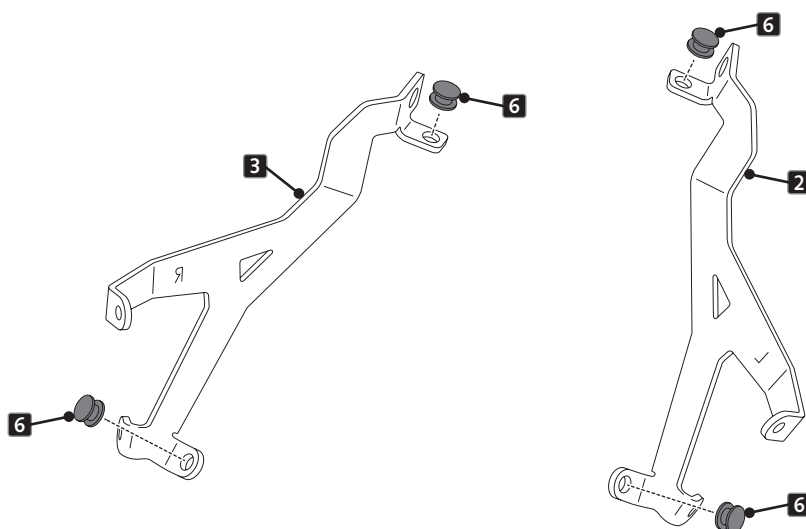


2

DISASSEMBLY
DESMONTAJE

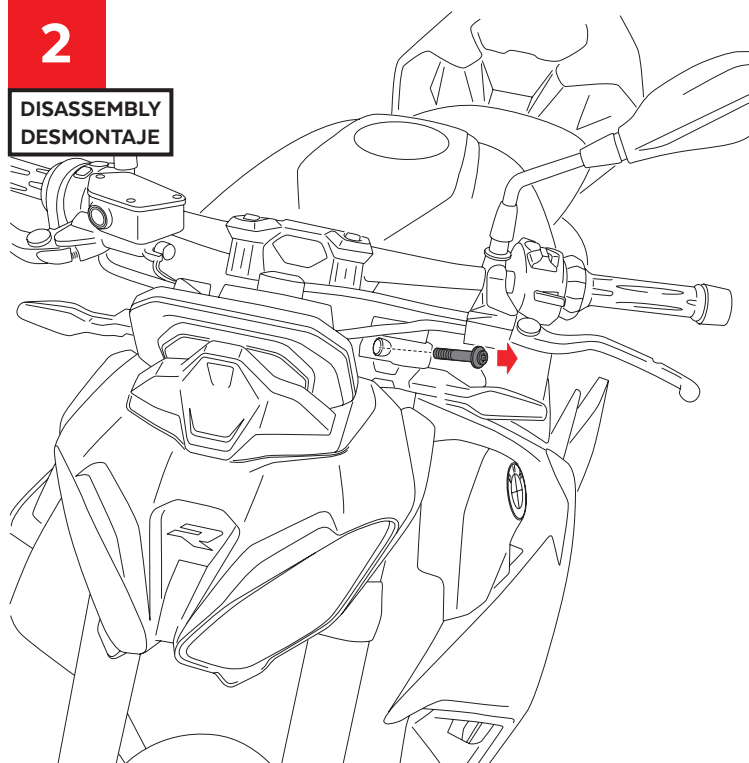

3

ASSEMBLY
MONTAJE

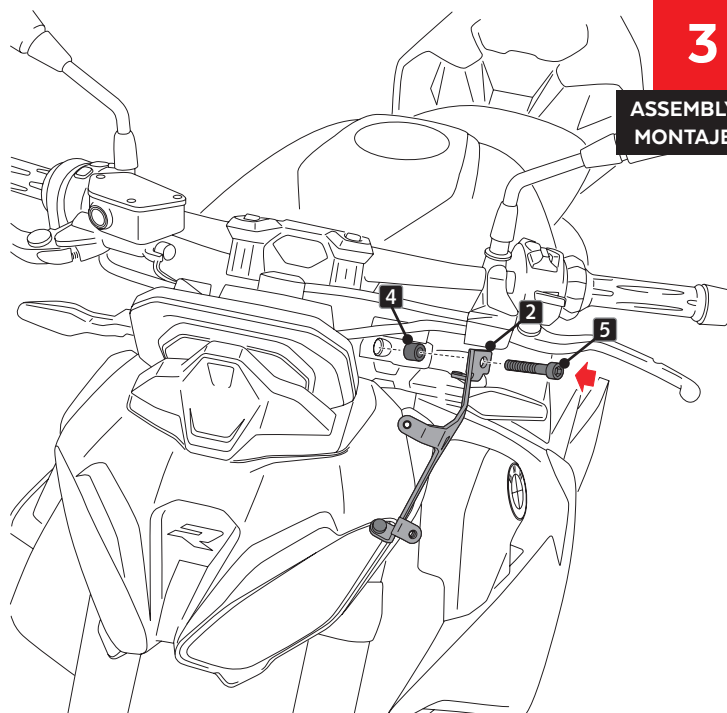


5 Par de apriete - consultar manual del fabricante
Tightening torque - consult the manufacturer's manual

BMW S1000R / M1000R '25-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG


4

**DISASSEMBLY
DESMONTAJE**

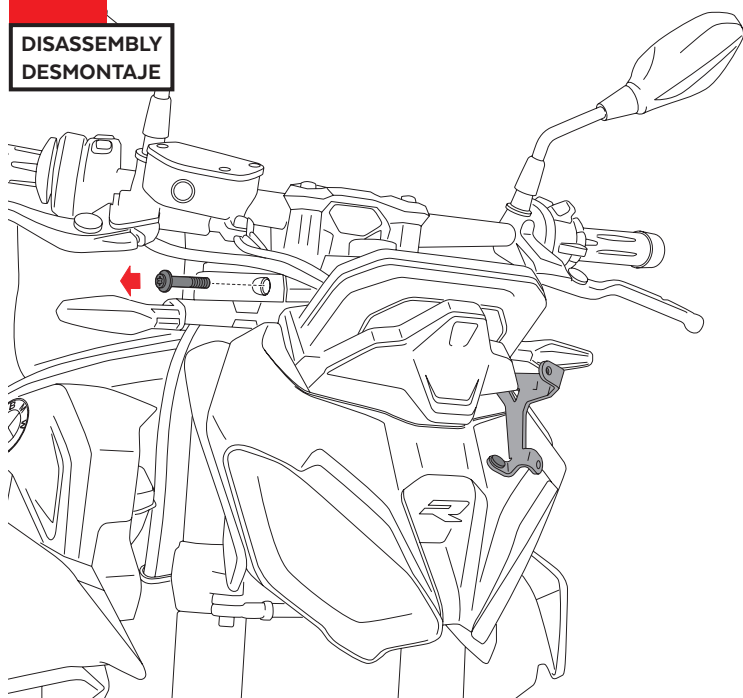

5


**ASSEMBLY
MONTAJE**

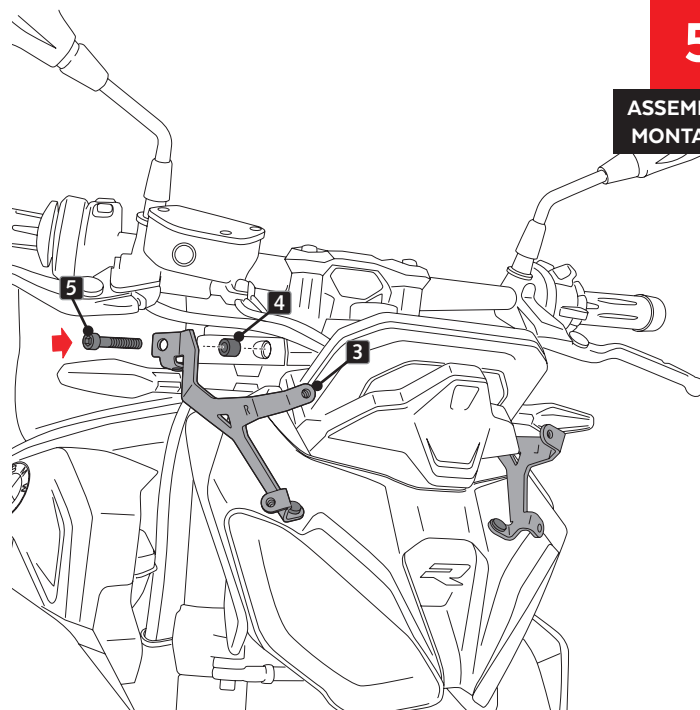

5 Par de apriete - consultar manual del fabricante
Tightening torque - consult the manufacturer's manual

6

**ASSEMBLY
MONTAJE**

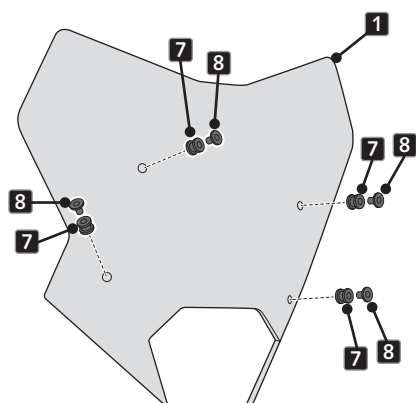

7

**ASSEMBLY
MONTAJE**

