

# DUCATI PANIGALE V4 '18-'20

## M O U N T I N G I N S T R U C T I O N S

REF 21505N

TAPAS LATERAL IZQUIERDO / LEFT SIDE COVERS

**ATENCIÓN:** Tapas con avisador de desgaste homologadas por la Federación Internacional de Motociclismo (FIM). Aptas para uso en competición.  
**ATTENTION:** Covers with a wear warning device approved by the International Motorcycling Federation (FIM). Suitable for use in competition.  
**ATTENTION:** Protections Carters avec temoins d'usure Homologues par la FIM (Federation Internationale de Motocyclisme). Convient pour un usage en competition.  
**ACHTUNG:** Abdeckungen mit einer von der International Motorcycling Federation (FIM) zugelassenen Verschleißwarnvorrichtung. Geeignet für den Einsatz im Wettkampf.



1 Person





30 min



EASY

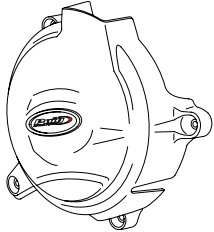

ID.	PIEZA / PART	DESCRIPCIÓN	DESCRIPTION	QTY.	REF.:
1		Tapa embrague	Clutch cover	1	CONJUNTO--20139
2		Tornillo M6x25 DIN912	M6x25 DIN912 screw	4	-

**CONSULTAR EN NUESTRA PAGINA WEB LA DISPONIBILIDAD DEL VIDEO DE MONTAJE DE ESTA REFERENCIA.  
 CONSULT OUR WEBSITE THE VIDEO MOUNT AVAILABILITY OF THIS REFERENCE.**



# DUCATI PANIGALE V4 '18-'20


REF 20505N

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

**1**

DESMONTAR EL CARENADO /  
REMOVE THE COVER


DISASSEMBLY  
DESMONTAJE

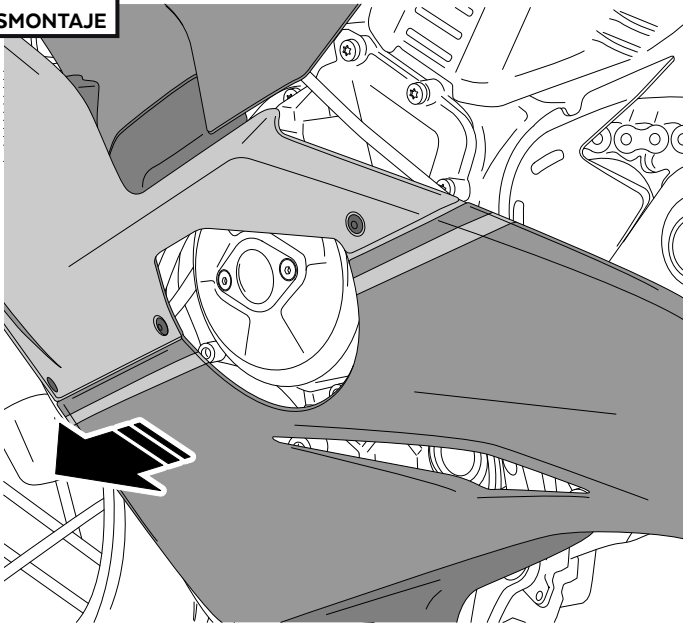

**2**



**A** Tornillería original  
Original screws

DISASSEMBLY  
DESMONTAJE

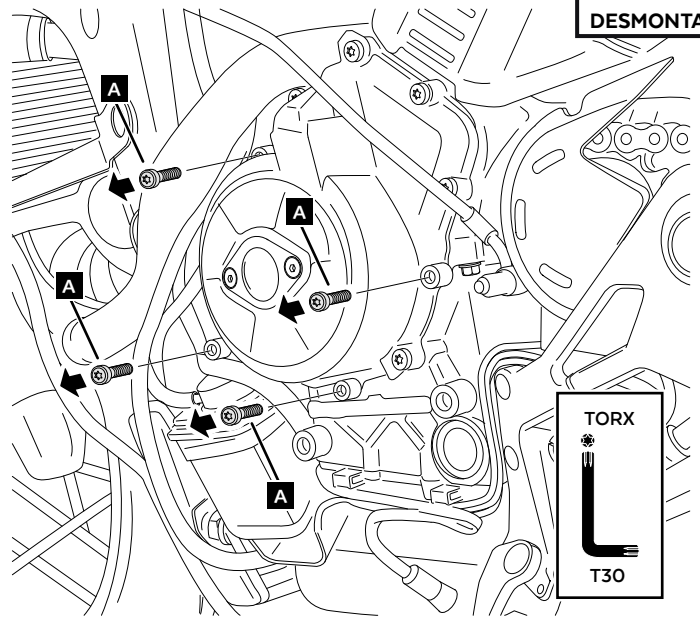

**3**

ASSEMBLY  
MONTAJE

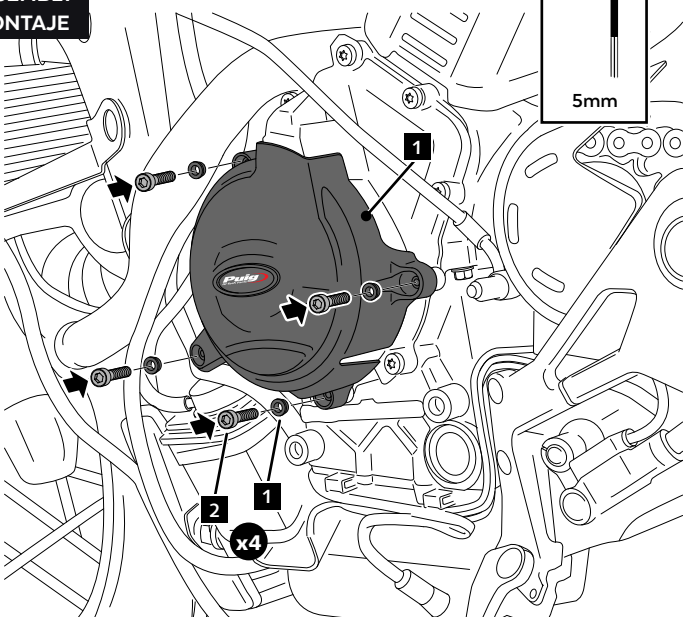


**2** 3,50 N/m + ángulo giro 90° - Par de apriete  
2,58 ft/lb + turning angle 90° - Tightening torque

**4**

MONTAR EL CARENADO /  
ASSEMBLE THE COVER

ASSEMBLY  
MONTAJE

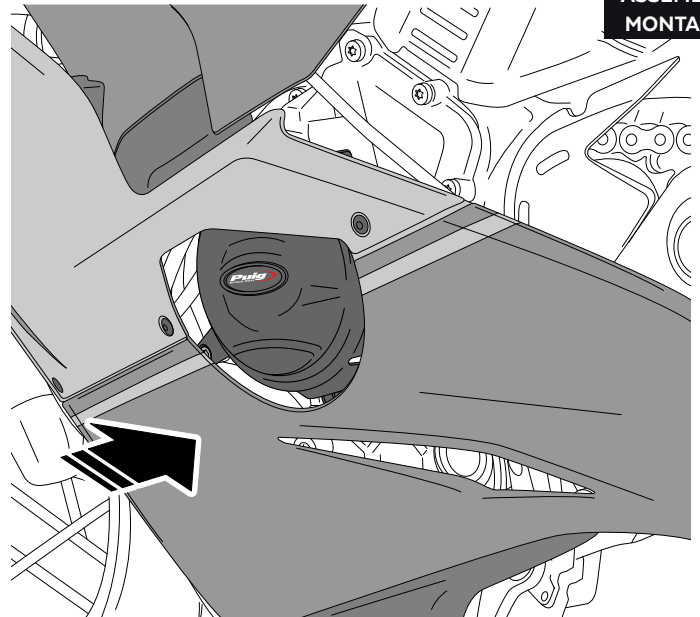

# DUCATI PANIGALE V4 '18-'20

## MOUNTING INSTRUCTIONS

REF 21505N

TAPAS LATERAL DERECHO / RIGHT SIDE COVERS



1 Person





30 min



EASY

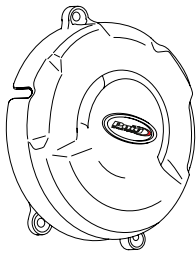

ID.	PIEZA / PART	DESCRIPCIÓN	DESCRIPTION	QTY.	REF.:
1		Tapa alternador	Alternator cover	1	CONJUNTO--20139
2		Tornillo M6x25 DIN912	M6x25 DIN912 screw	4	-

# DUCATI PANIGALE V4 '18-'20


REF 20505N

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

**1**

DESMONTAR EL CARENADO /  
REMOVE THE COVER


DISASSEMBLY  
DESMONTAJE

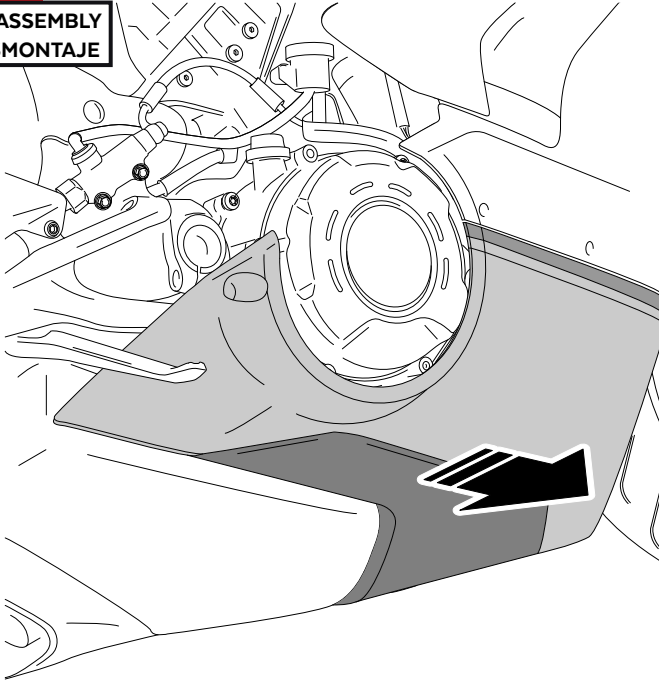

**A** Tornillería original  
Original screws



**2**

DISASSEMBLY  
DESMONTAJE

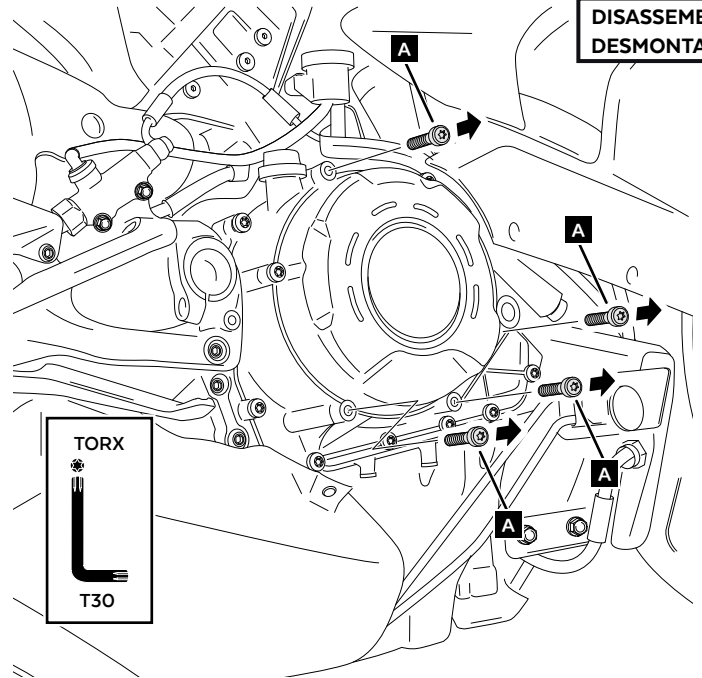

**3**

ASSEMBLY  
MONTAJE

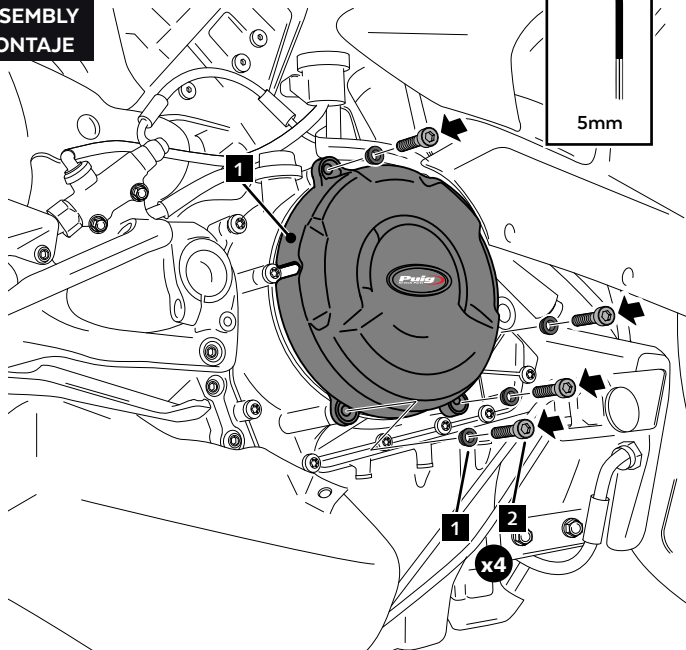

**2** 3,50 N/m + ángulo giro 90° - Par de apriete  
2,58 ft/lb + turning angle 90° - Tightening torque

MONTAR EL CARENADO /  
ASSEMBLE THE COVER

**4**

ASSEMBLY  
MONTAJE

