

# BMW R NINE T


## M O U N T I N G I N S T R U C T I O N S

REF 9160

**RETRO SEMI FAIRING  
(BLACK COLOUR)**

REF 9178

**RETRO SEMI FAIRING  
(CARBON LOOK)**

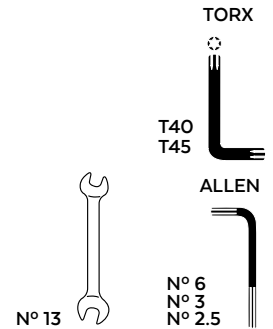

ID.	PIEZA / PART	DESCRIPCIÓN	DESCRIPTION	QTY.	REF.:
1		Cúpula	Screen	1	9196F/H/N/WM3
2		Carcassa ABS	ABS fairing	1	10534
3		Soporte metálico derecho	Right metal support	1	SOPOR3P5-R-9160
4		Soporte metálico izquierdo	Left metal support	1	SOPOR3P5-L-9160
5		Soporte metálico inferior	Lower metal support	1	SOPOR3P5-I-9160
6		Tornillo allen M4x16 ISO7380	M4x16 ISO7380 Allen screw	5	TORNIAI7380-310
7		Silentblock M4	M4 silentblock	5	SILENBTM4---062
8		Arandela de nylon M4	M4 nylon washer	5	ARNV00000000311
9		Tornillo allen M5x16 Ø11 ISO 7380	M5x16 Ø11 ISO 7380 allen screw	3	TORNI-I7380-493
10		Silentblock M5	M5 silentblock	3	SILENBTM5-046/1
11		Arandela de nylon M5x1	M5x1 nylon washer	3	ARNV00000000245
12		Tornillo allen M8x35 DIN912	M8x35 DIN912 Allen screw	2	TORNI-AD912-196
13		Casquillo Ø8,5xØ14x12mm	Ø8,5xØ14x12mm arrowhead	2	CASQUI-----0083
14		Tapón tornillo M5 ISO7380	M5 ISO7380 screw cap	3	TAPON-----85
15		Kit adhesivos	Stickers set	1	10590


# BMW R NINE T

## INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

**1**


**DISASSEMBLY  
DESMONTAJE**

**A** Tornillería original  
Original screws

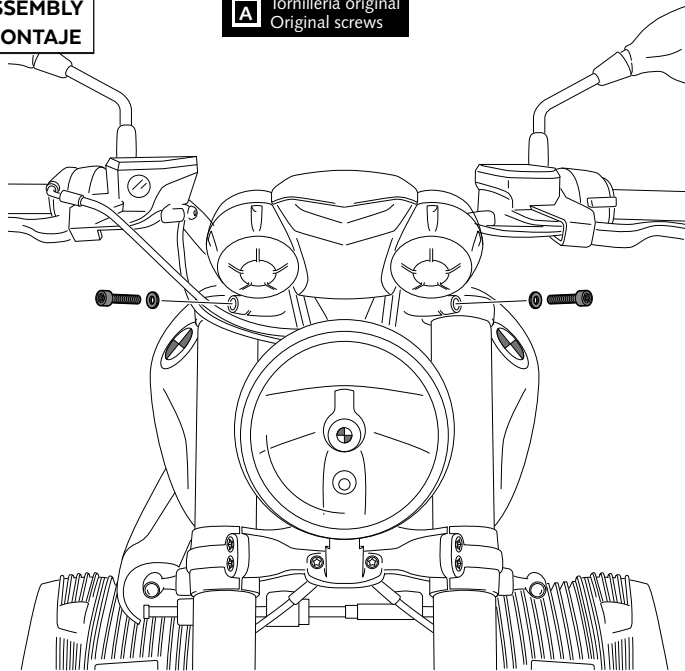

**2**

**ASSEMBLY  
MONTAJE**

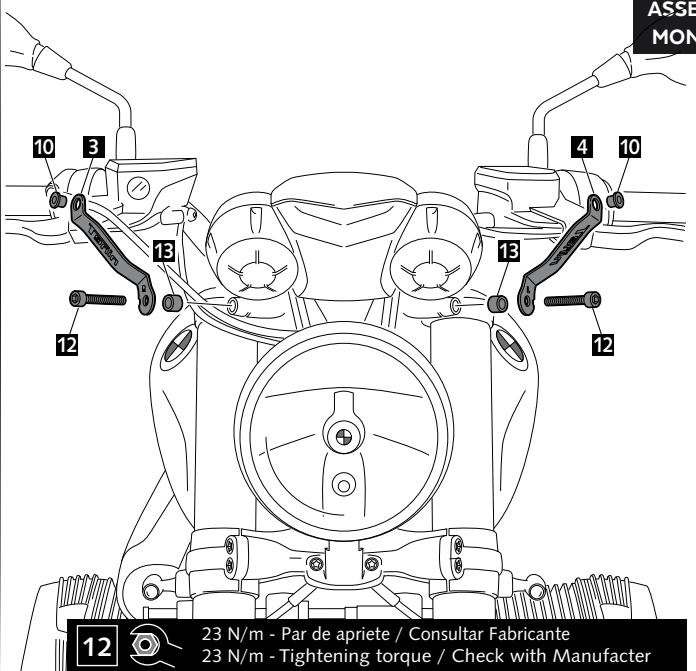


**12** 23 N/m - Par de apriete / Consultar Fabricante  
23 N/m - Tightening torque / Check with Manufacturer

**3**


**ASSEMBLY  
MONTAJE**

**A** Piezas originales  
Original parts

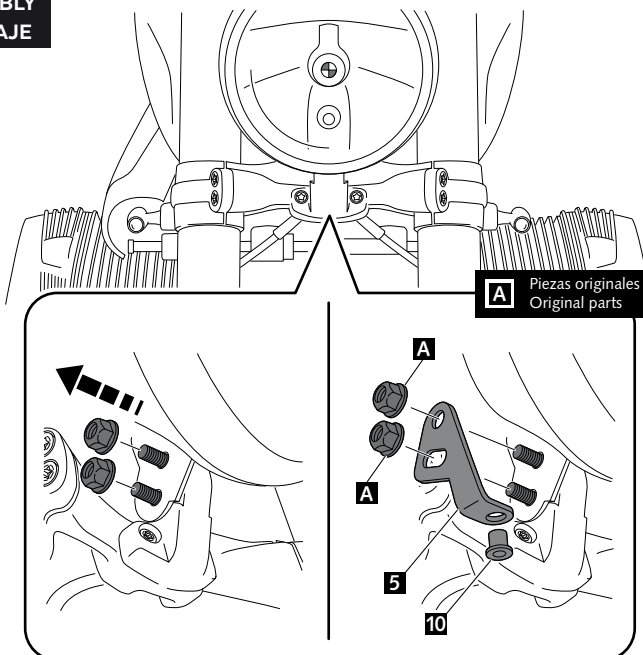

**4**

**ASSEMBLY  
MONTAJE**

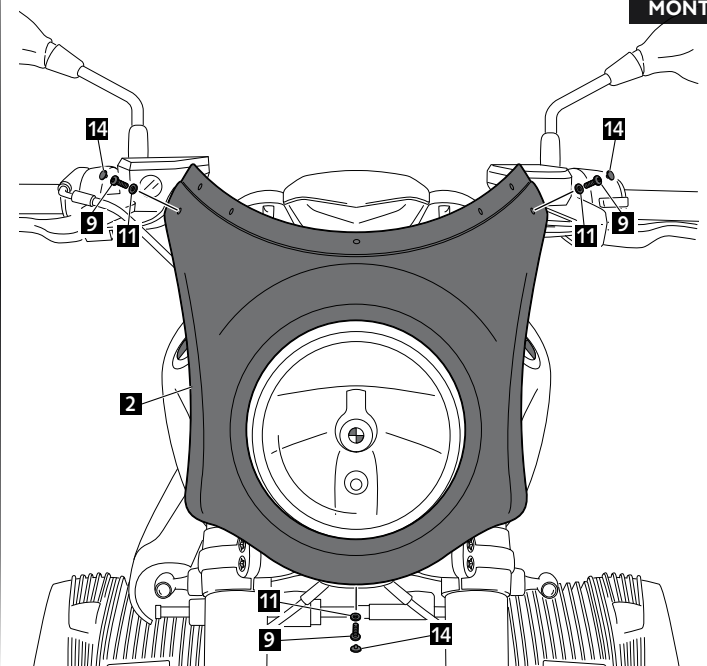


# BMW R NINE T

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG


**5**

ASSEMBLY  
MONTAJE

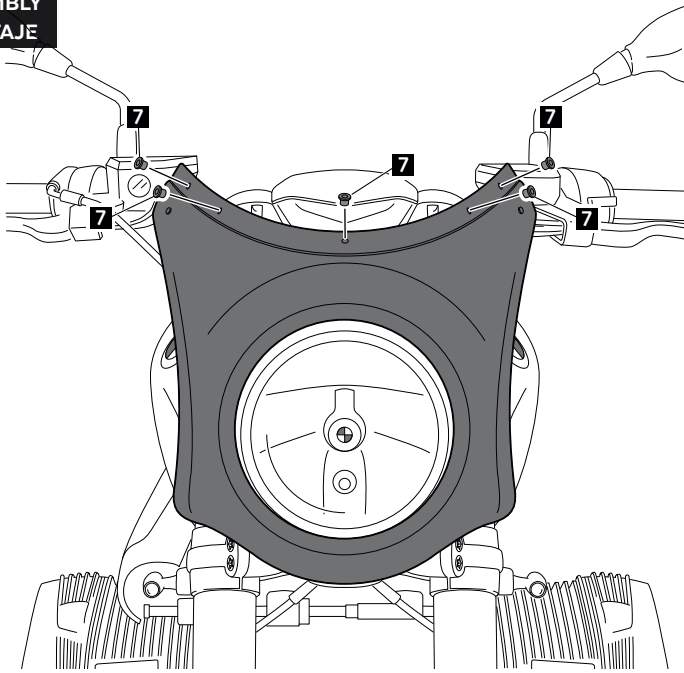


**6**

ASSEMBLY  
MONTAJE

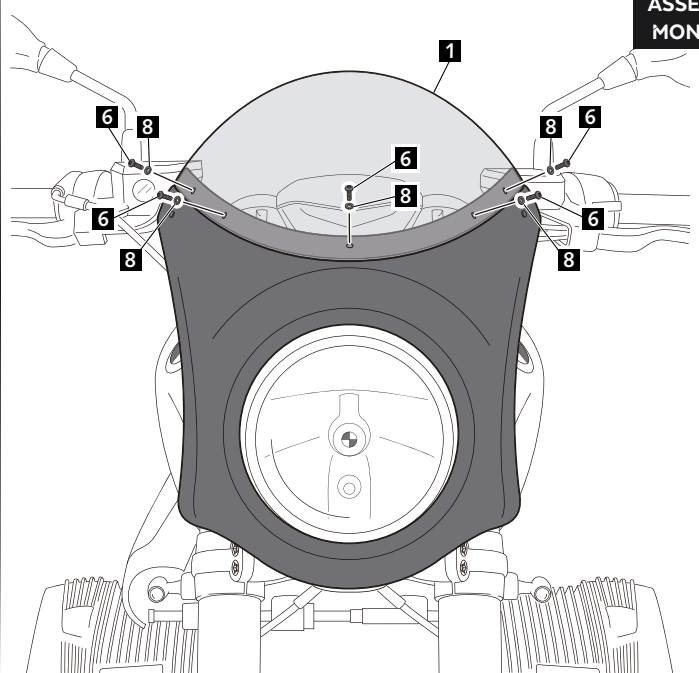

**7**

ASSEMBLY  
MONTAJE

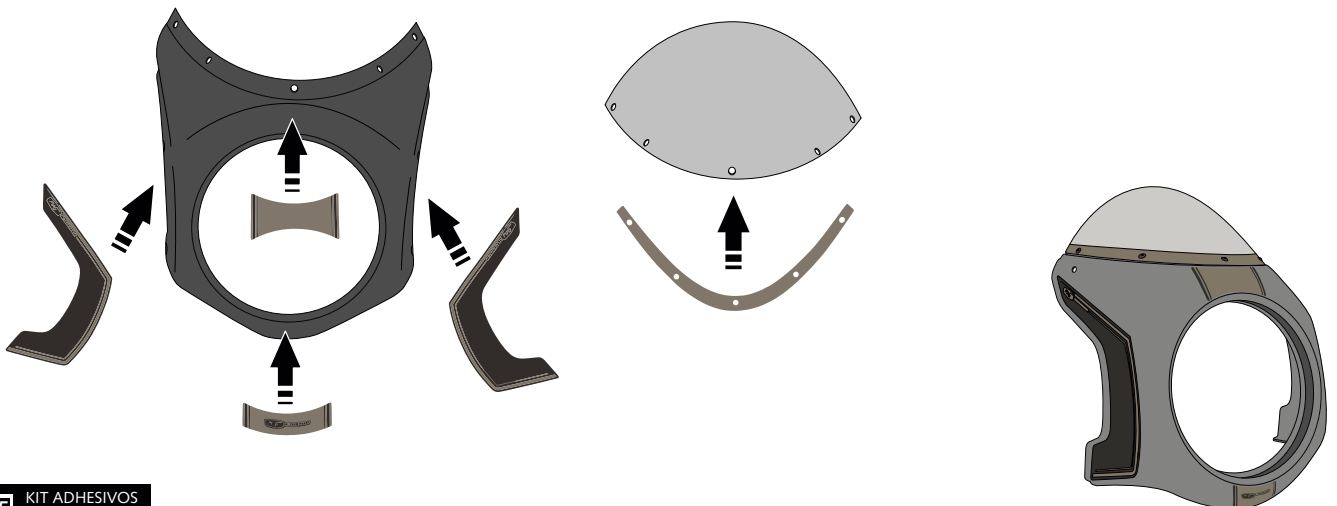

**15** KIT ADHESIVOS  
STICKERS SET