
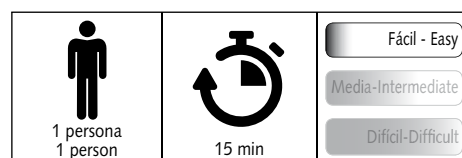


EXTENSIÓN GUARDABARROS DELANTERO PARA - FRONT FENDER EXTENSION FOR - KOTFLÜGELVERBREITERUNG FÜR BMW R1200GS '13 - '16

NO ES NECESARIO AGUJEREAR EL GUARDABARROS ORIGINAL
IT'S NOT NECESSARY TO DRILL THE ORIGINAL FENDER

Ref.: 9174

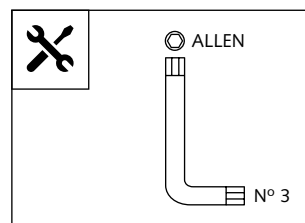


ID.	PIEZA / PART	DESCRIPCIÓN	DESCRIPTION	QTY.
1		Extensión guardabarros delantero	Frontfender extension	1
2		Soporte metálico superior (1)	Superior metal support (1)	2
3		Soporte metálico inferior (2)	Inferior metal support (2)	2
4		Separador de silicona Ø12x3,5 (se suministra montada en las piezas 2-3)	Ø12x3,5 silicon separator (supplied already mounted on items 2-3)	12
5		Separador de silicona Ø15x7,5 (se suministra montada en las piezas 1-2-3)	Ø15x7,5 silicon separator (supplied already mounted on items 1-2-3)	4
6		Tornillo Allen M5x11 Ø11 ISO7380	M5x11 Ø11 ISO7380 Allen screw	4
7		Arandela de nylon M5x1	M5x1 nylon washer	4
8		Arandela de goma M5x2mm	M5x2 Rubber washer	4
9		Tapón tornillo M5 ISO 7380	M5 ISO 7380 screw cap	4

EXTENSIÓN GUARDABARROS DELANTERO PARA - FRONT FENDER EXTENSION FOR -
KOTFLÜGELVERBREITERUNG FÜR
BMW R1200GS '13 - '16

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG


MONTAJE
ASSEMBLY

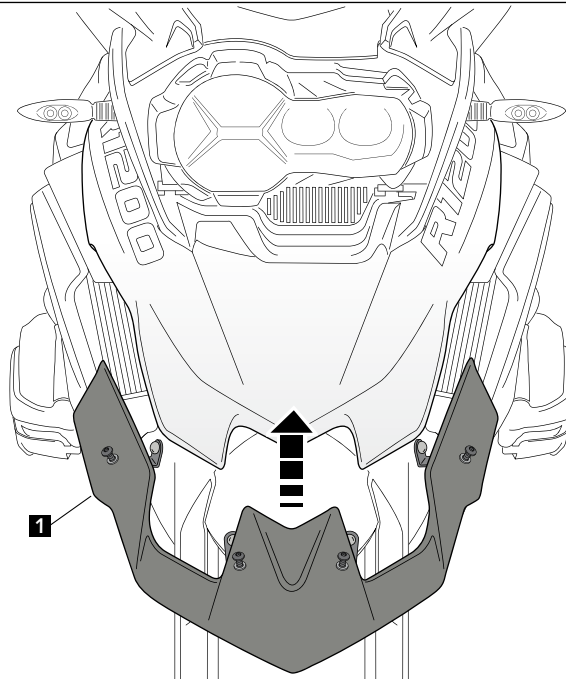


PRESENTAR LA PIEZA, NO APRETAR TORNILLOS
FILING PART, DON'T TIGHTEN THE SCREWS

1

MONTAJE
ASSEMBLY

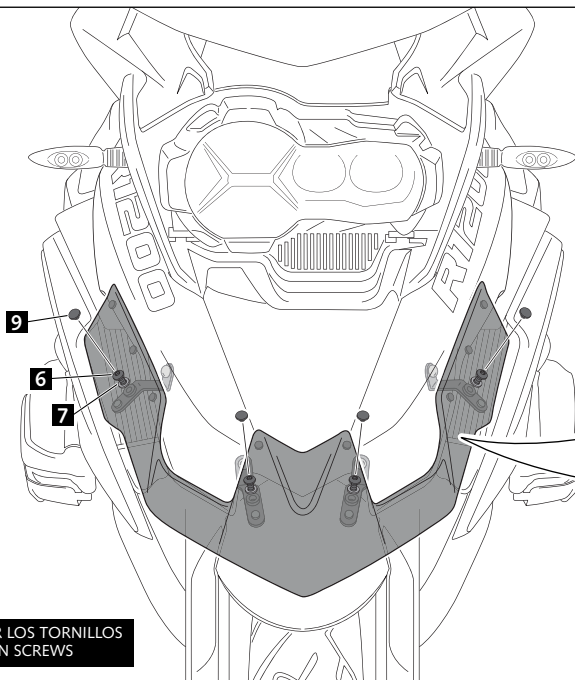

6 APRETAR LOS TORNILLOS
TIGHTEN SCREWS

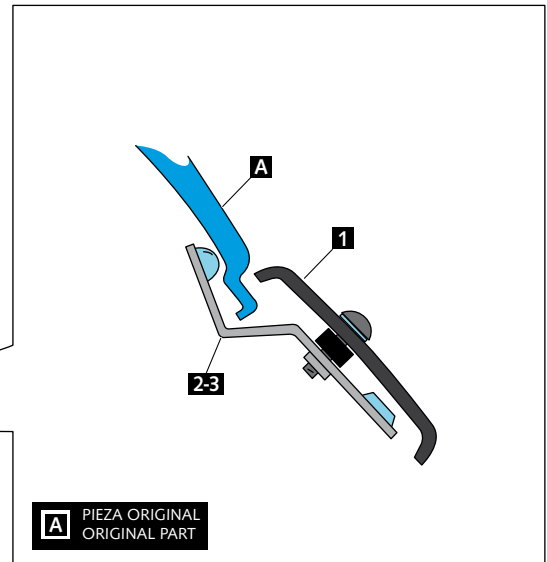

A PIEZA ORIGINAL
ORIGINAL PART

2

EXTENSIÓN GUARDABARROS DELANTERO PARA - FRONT FENDER EXTENSION FOR -
KOTFLÜGELVERBREITERUNG FÜR
BMW R1200GS '13 - '16

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

DESPIECE
EXPLOTING

