

MOTOPLASTIC, S.A.

Molí de la sal, 1 - 08403 Granollers (Barcelona) SPAIN

Tel. 34 93 849 06 33 - Fax 34 93 849 09 88

info@puig.tv - info@puigusa.com

www.puig.tv - www.puigusa.com

Ref.: 8140

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

KTM 1290 SUPERDUKE

KIT SOPORTE PARA DESPLAZAR LA PANTALLA PUIG CUANDO LA MOTO LLEVE MONTADO EL GPS ORIGINAL

KIT SUPPORT TO MOVE THE PUIG SCREEN WHEN THE ORIGINAL GPS IS MOUNTED ON THE BIKE



ID.	PIEZA / PART	DESCRIPCIÓN	DESCRIPTION	QTY.	
Conjunto carenabris Ref. 7014 Windshield kit Ref. 7014	1		Carenabris Touring	Touring windshield	1
	2		Soporte metálico Cbris derecho	Right metal windshield support	1
	3		Soporte metálico Cbris izquierdo	Left metal windshield support	1
	4		Visera Anti-reflectante	Anti-reflect Visor	1
	5		Casquillo metálico Ø int. 8,5 x Ø ext. 14x20 mm	Ø inner 8,5 x Ø outer 14x20 mm arrowhead	2
	6		Tornillo Allen DIN 912 M8x55 (negro)	DIN 912 M8x55 (black) Allen screw	2
	7		Silentblock M5	M5 Silentblock	4
	8		Arandela de nylon M5x0,5	M5x0,5 nylon washer	4
	9		Tornillo Allen M5x16 ISO 7380 (negro)	M5x16 ISO 7380 (black) Allen screw	4
Kit soportes GPS 8140 Supports Kit for GPS 8140	10		Soporte metálico GPS derecho	Right metal GPS support	1
	11		Soporte metálico GPS izquierdo	Left metal GPS support	1
	7		Silentblock M5	M5 Silentblock	4
	9		Tornillo Allen M5x16 ISO 7380 (negro)	M5x16 ISO 7380 (black) Allen screw	4

MOTOPLASTIC, S.A.

Molí de la sal, 1 - 08403 Granollers (Barcelona) SPAIN





Tel. 34 93 849 06 33 - Fax 34 93 849 09 88

info@puig.tv - info@puigusa.com

www.puig.tv - www.puigusa.com

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

KIT SOPORTE CBRIS PUIG PARA GPS ORIGINAL KTM 1290 SUPERDUKE SPECIAL SUPPORTS KIT FOR PUIG SCREEN FOR KTM 1290 SUPERDUKE WITH ORIGINAL GPS

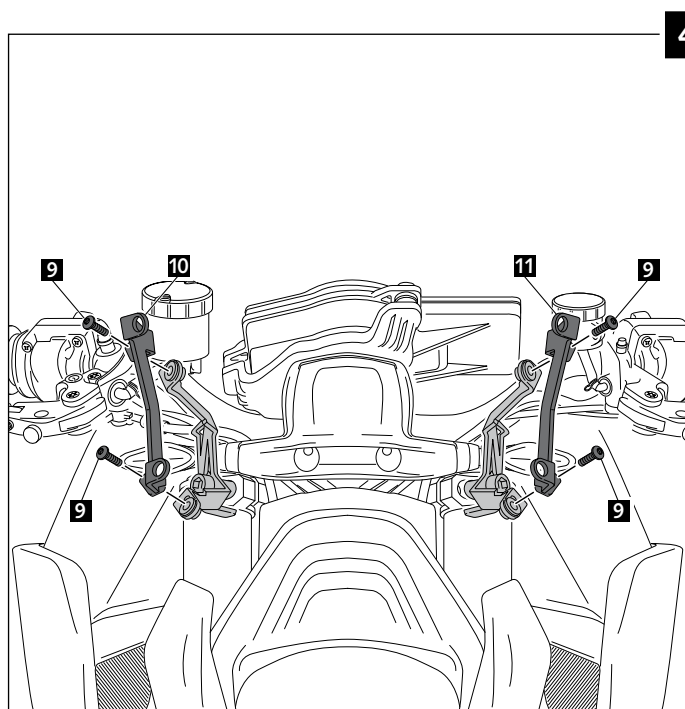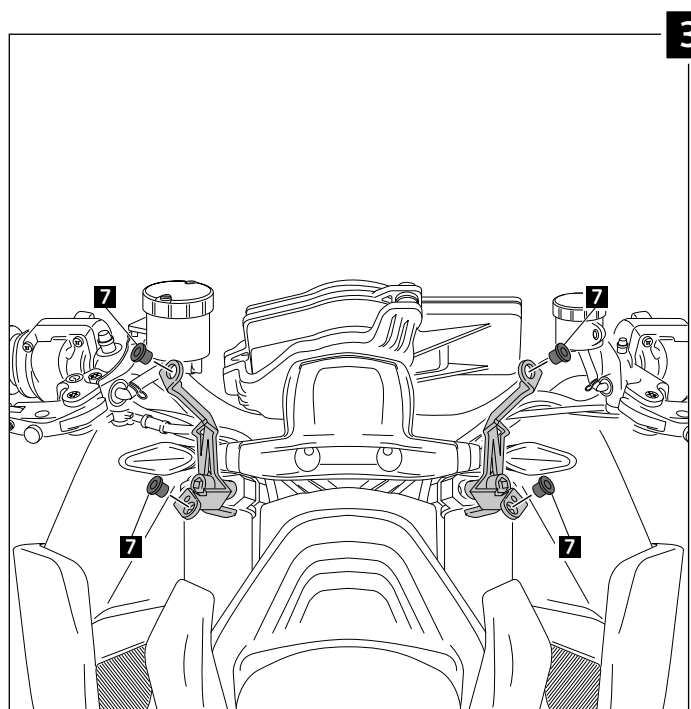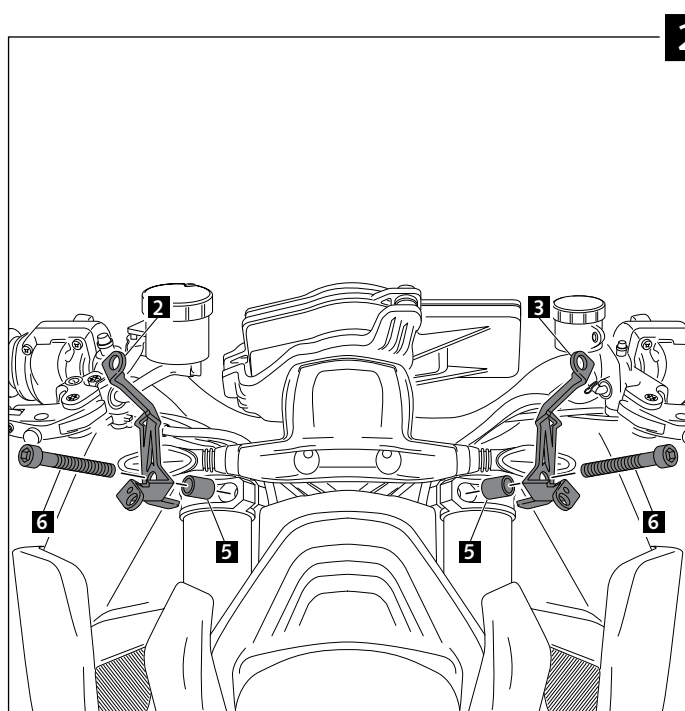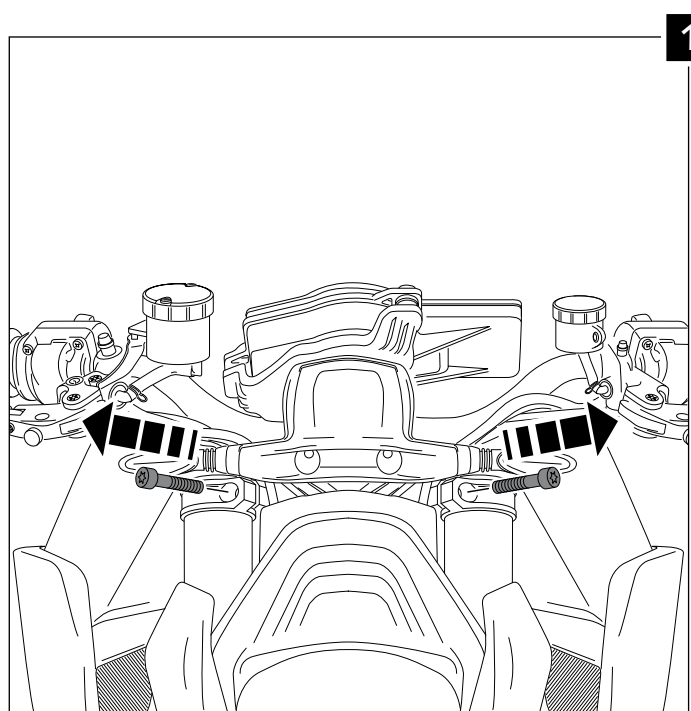

MOTOPLASTIC, S.A.

Molí de la sal, 1 - 08403 Granollers (Barcelona) SPAIN

Tel. 34 93 849 06 33 - Fax 34 93 849 09 88

info@puig.tv - info@puigusa.com

www.puig.tv - www.puigusa.com

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

KIT SOPORTE CBRIS PUIG PARA GPS ORIGINAL KTM 1290 SUPERDUKE SPECIAL SUPPORTS KIT FOR PUIG SCREEN FOR KTM 1290 SUPERDUKE WITH ORIGINAL GPS

