

# PROTECTOR DE MOTOR PARA SUZUKI GSXR 600(01-03)/750 (00-03) CRASH PADS FOR SUZUKI GSXR 600(01-03)/750 (00-03)

REF: 1971



## INSTRUCCIONES DE MONTAJE

Desmontar el tornillo de sujeción del chasis al motor en el punto marcado en la fotografía. En el lado izquierdo es necesario desmontar el lateral del carenado, para sacar el tornillo y colocar el desplazador (9) tal y como indica el croquis adjunto. Montar los protectores en el lado correspondiente según el croquis adjunto, usando los tornillos que se suministran. Una vez apretado colocar los tapones (1).

## INSTRUCTIONS TO ASSEMBLE



Dismount the fixation screws from the chassis to the engine in the support point marked on the picture. On the right side, the bodywork must be removed to mount the fastener and place the iron plate as the figure shows. Mount the crash pads on each own side as the figure shows, using the supplied screws. Once pressed, place the end caps (1).



PUNTO DE FIJACIÓN  
SUPPORT POINT

## MATERIAL SUMINISTRADO / MATERIAL SUPPLIED

POSICIÓN	DENOMINACIÓN		CANTIDAD
1	Tapón de plástico	Plastic lids	2
2	Tornillo M10/125 x 90 DIN912	M10/125 x90 screw	1
3	Tornillo M10/150x50 DIN 912	M10/150x50 screw	1
4	Arandela Ø20ext.Ø10int x2 DIN125/A	Washer Ø20ext.Ø10int x2	2
5	Protector Nylon	Nylon protector	2
6	Casquillo aluminio l/derecho	Aluminium metal arrowhead right hand side	1
7	Casquillo aluminio l/izquierdo	Aluminium metal arrowhead left hand side	1
8	Tornillo M10/125x55 DIN912	M10/125x55 screw	1
9	Desplazador lado izquierdo	Iron plate left hand side	1
10	Tuerca M10/150 autobloc DIN982,8	M10/150 nut	1

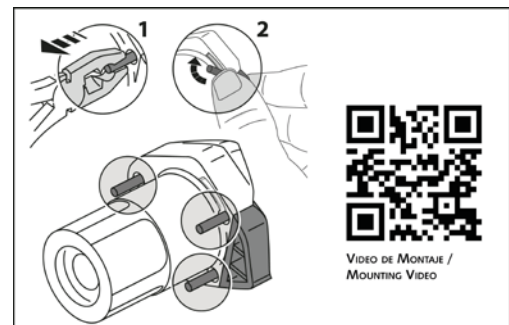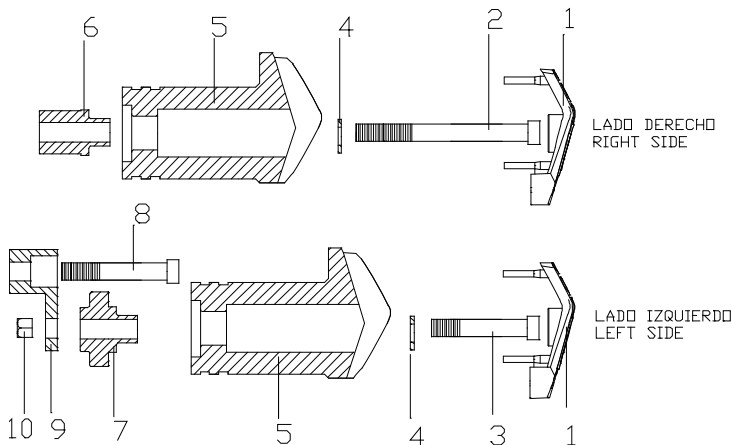

EL MONTAJE DE LOS PROTECTORES DE MOTOR NO GARANTIZAN UNA PROTECCION INTEGRAL EN CASO DE CAIDAS. MOTOPLASTIC-PUIG DECLINA TODA RESPONSABILIDAD EN CASO DE DETERIORO DE LA MOTOCICLETA.  
THE USE OF CRASH PADS DO NOT GUARANTEE A FULL PROTECTION IN CASE OF ACCIDENT. MOTOPLASTIC-PUIG DECLINE ANY RESPONSIBILITY IN CASE OF MOTORCYCLE DAMAGE.